



## Analogue Control panel CAE-300

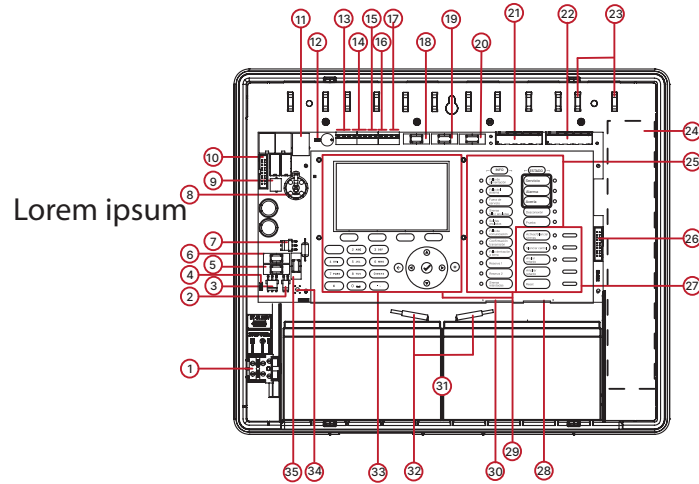


- |                                      |   |
|--------------------------------------|---|
| 1 Mains power supply input (230 VAC) | 18 24V AUX output fuse F1 0.5 A         |
| 2 Battery cable input                | 19 Sounder fuse 2 F3 0.5 A              |
| 3 CPU power supply                   | 20 Sounder fuse 1 F2 0.5 A              |
| 4 Disables earth leakage monitoring  | 21 Terminal strip Loop 1                |
| 5 24 V output fuse F4 2A             | 22 Terminal strip Loop 1                |
| 6 Battery fuse F6 2A                 | 23 Cable tie mount                      |
| 7 External input                     | 24 Vertical expansion card housing area |
| 8 Clock battery                      | 25 Main indicators                      |
| 9 USB connector                      | 26 Connector COM 2                      |
| 10 COM 1 connector                   | 27 Main control keypad                  |
| 11 Ethernet RJ45 connector           | 28 Customizable language card A         |
| 12 Buzzer OFF CPU fault              | 29 Indicators lights                    |
| 13 Alarm relay                       | 30 Customizable language card B         |
| 14 Fault relay                       | 31 Batteries                            |
| 15 Sounder 1                         | 32 Quick-release battery terminal       |
| 16 Sounder 2                         | 33 Display and keyboard                 |
| 17 24 V AUX output                   | 34 Battery power button                 |
|                                      | 35 Auxiliary Power Supply Fuse F5 2A    |


### Wiring diagram

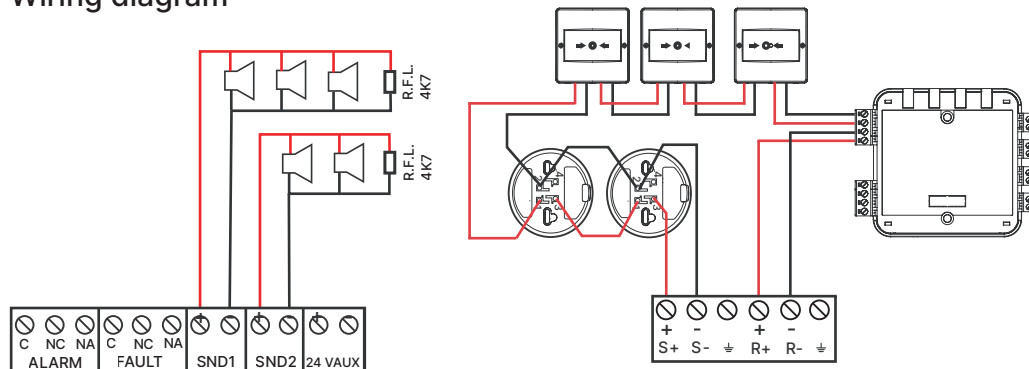


Home screen

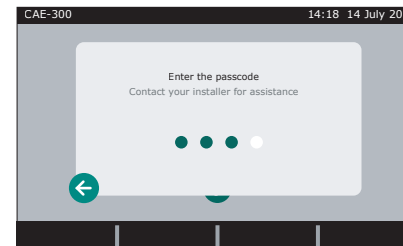


Press "✓" and enter code "9999"

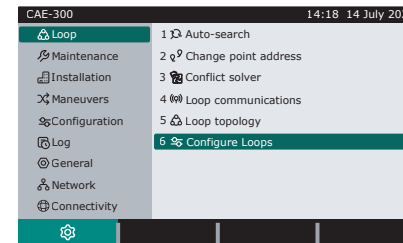


Press "1" Loops and "6" Loop Configuration.

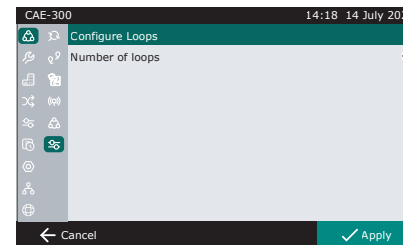


If necessary, modify the number of operating loops in the control panel and press "Apply." The control panel will restart.

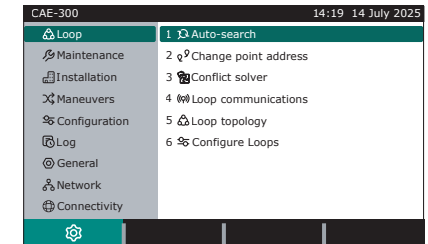


Press "1" Loops and "1" Auto-search

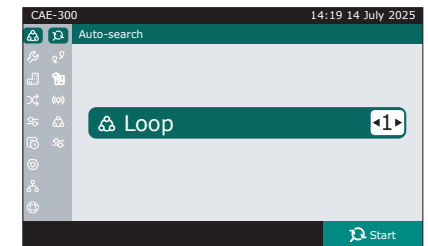

Select the loop number and press "Start."

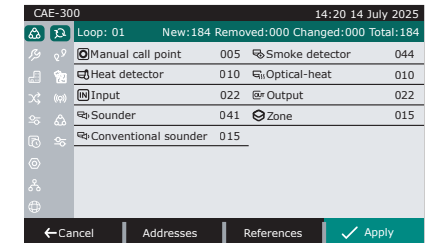

The devices found in the loop will be displayed. Press "Apply" to save the configuration.

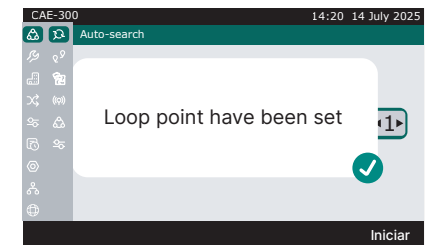

Repeat this process for all loops available in the control panel.

