



## Conventional Control panel CCE-200 PLUS

1. Mains power supply input (230 VAC)
2. Disables earth leakage monitoring
3. Battery cable input
4. Power supply fuse
5. Auxiliary PS fuse
6. Battery fuse F6
7. Clock battery
8. Delay switch
9. USB connector
10. Buzzer off CPU fault
11. COM1 connector
12. Sounder 1 fuse
13. Display cover
14. Sounder 2 fuse
15. Alarm relay
16. Fault relay
17. Sounder 1
18. Sounder 2
19. 24 V auxiliary
20. 24 V resettable
21. External input
22. 24V output fuse
23. Zone terminal strip
24. Cable tie mount
25. Main indicators
26. Keypad access key
27. COM2 connector
28. Vertical expansion card housing area
29. Main control keypad
30. Batteries
31. Quick-release battery terminal
32. Battery-powered push-button

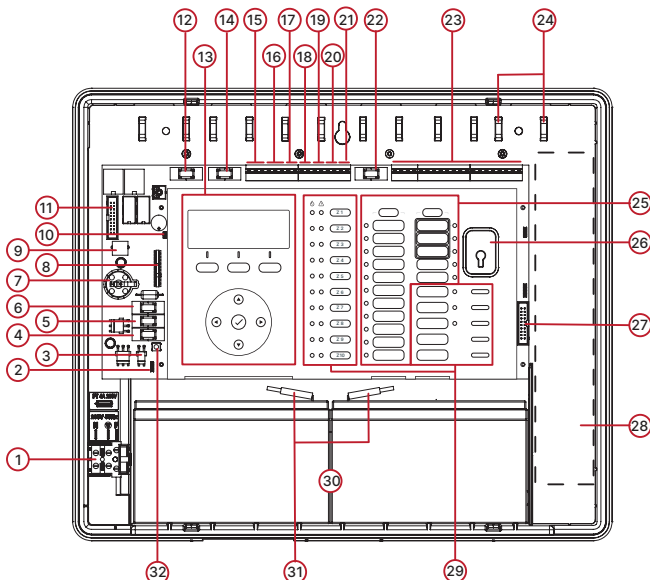

## Wiring diagram

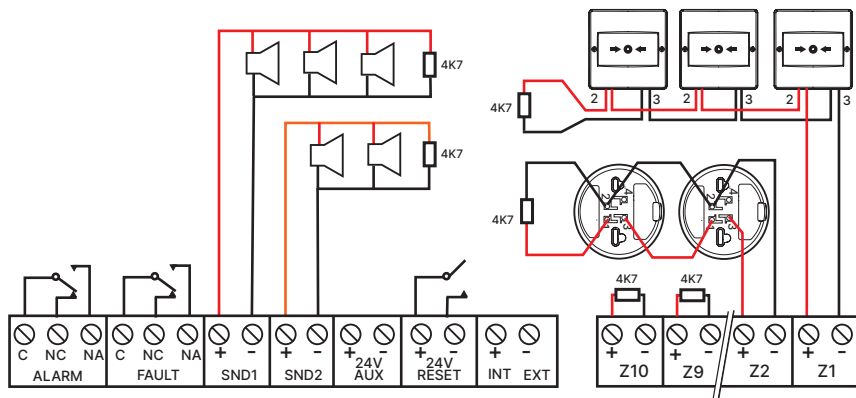

For detailed characteristics, scan the following QR code.

