



Conventional Control panel CCE-200

1. Mains power supply input (230 VAC)
2. Disables earth leakage monitoring
3. Battery cable input
4. Power supply fuse
5. Battery fuse F6
6. Delay switch
7. Buzzer off CPU fault
8. COM1 connector
9. Sounder 1 fuse
10. Text zone
11. Sounder 2 fuse
12. Alarm relay
13. Fault relay
14. Sounder 1
15. Sounder 2
16. 24 V auxiliary
17. 24 V resettable
18. External input
19. 24V output fuse
20. Zone terminal strip
21. Cable tie mount
22. Main indicators
23. Keypad access key
24. COM2 connector
25. Vertical expansion card housing area
26. Main control keypad
27. Batteries
28. Quick-release battery terminal
29. Battery-powered push-button

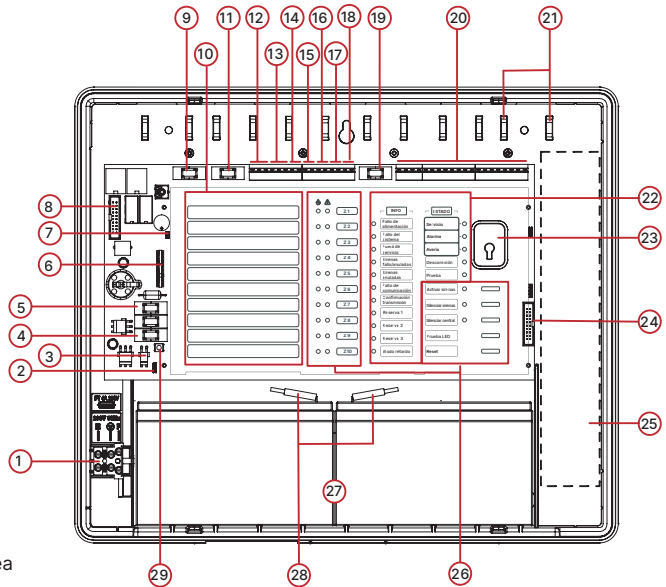

Wiring diagram

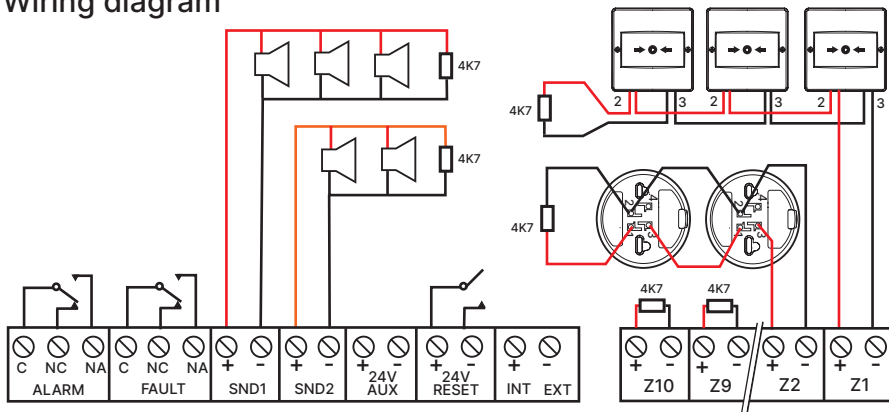

For detailed characteristics, scan the following QR code.

